



- Notes:
1. Material: Stainless Steel and Aluminum.
  2. Sensing Reference Frame Origin at Surface Center of Tool Adapter.
  3. Do not disassemble transducer. Doing so could damage transducer and will void the warranty.
  4. For best accuracy transducer must be mounted to a surface rigid enough to support loads without deflection.

NOTES: UNLESS OTHERWISE SPECIFIED.  
 DO NOT SCALE DRAWING. ALL DIMENSIONS ARE IN MILLIMETERS.



1031 Goodworth Drive, Apex, NC 27539, USA  
 Tel: +1.919.772.0115 Email: info@ati-ia.com  
 Fax: +1.919.772.8259 www.ati-ia.com  
 ISO 9001 Registered Company

PROPERTY OF ATI INDUSTRIAL AUTOMATION, INC. NOT TO BE REPRODUCED IN ANY MANNER EXCEPT ON ORDER OR WITH PRIOR WRITTEN AUTHORIZATION OF ATI.

DRAWN BY: L. Fisher, 1/9/2015		TITLE	
CHECKED BY: P. Fusco, 4/15/2015		IP60 Omega251 Transducer	
PROJECT # 140219-2	SHEET 1 OF 1	SCALE 1:3	SIZE B
		DRAWING NUMBER 9230-05-1468	REVISION 01

