
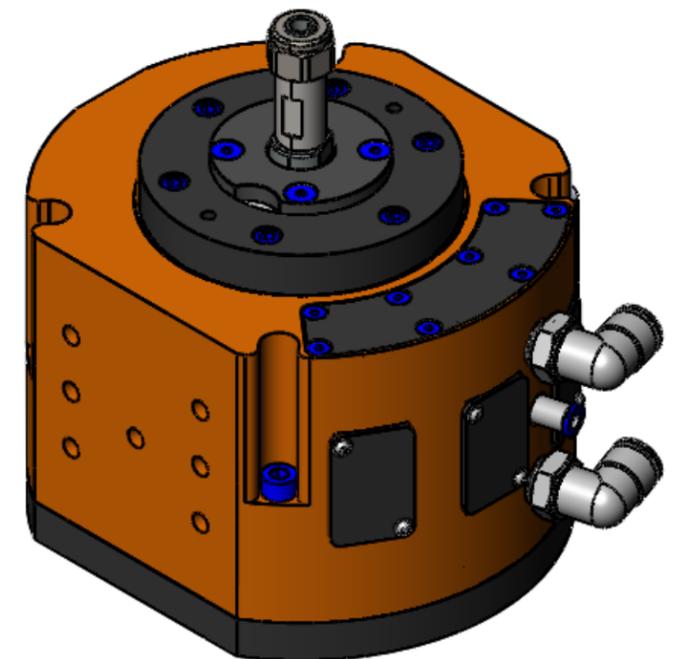
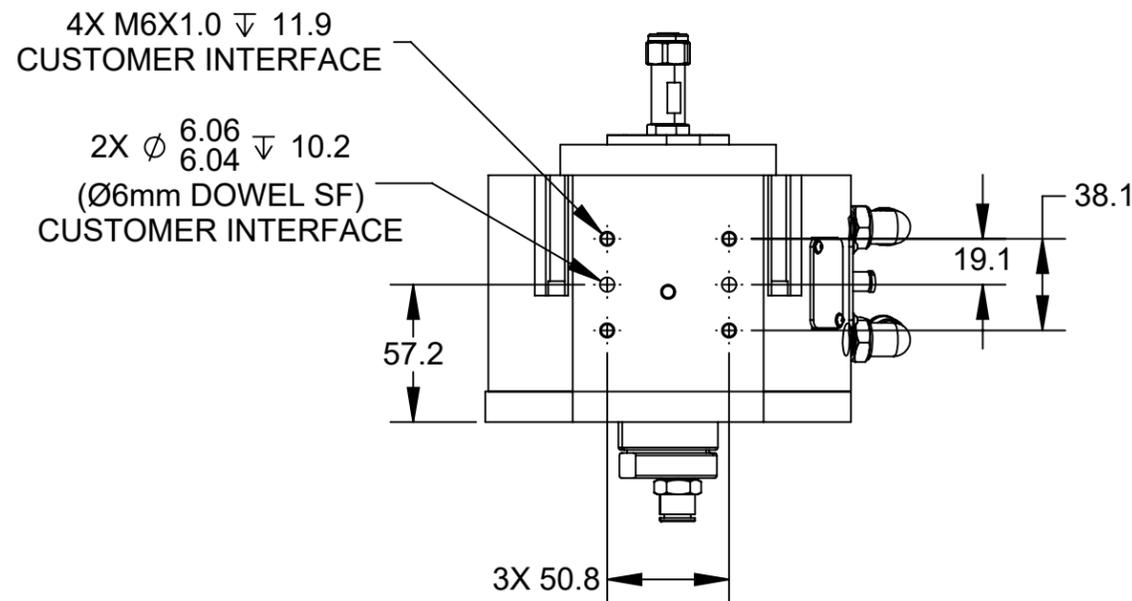
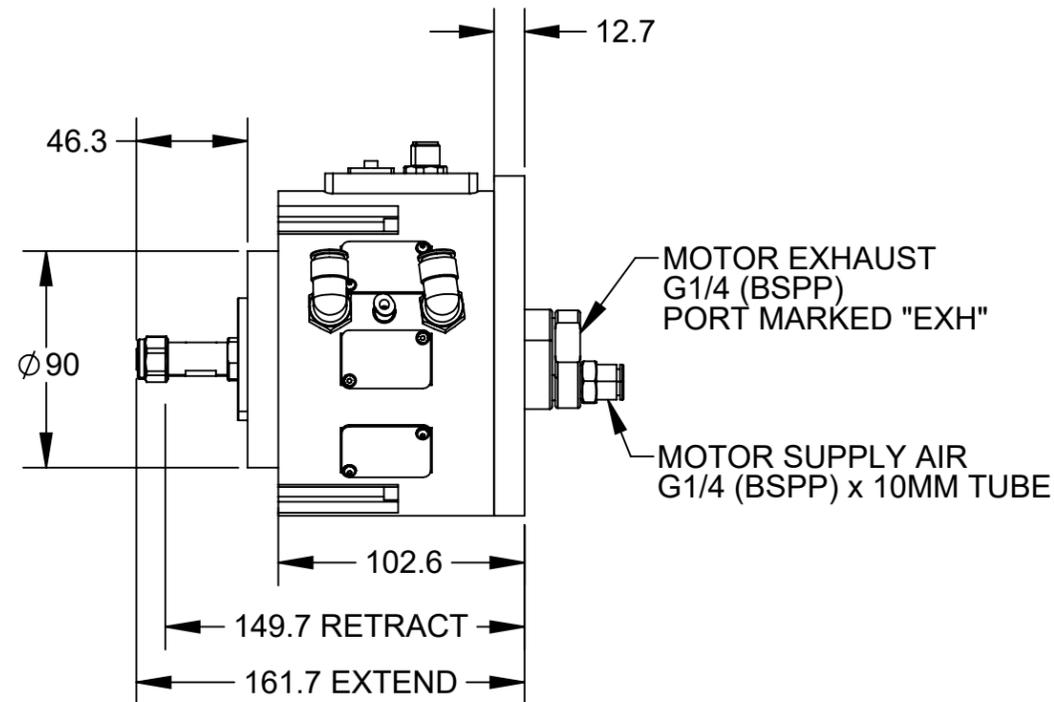
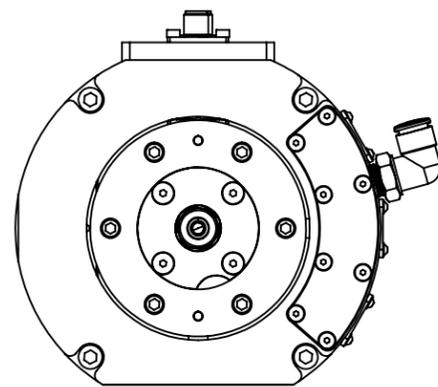



REV.	DESCRIPTION	INITIATOR	DATE
01P	INITIAL RELEASE	SY	9/3/2021

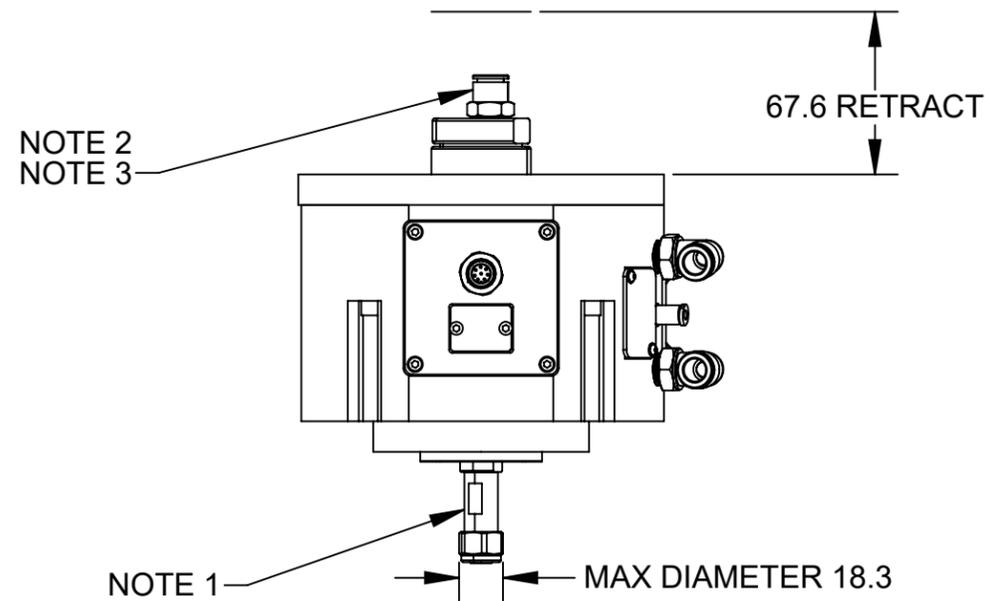

- Notes:
- 15,000 RPM (Governed) +/- 10%, lubricated air motor. Peak power 0.9 HP @ 7500 RPM.
 - Air consumption 32 CFM [15.1 L/S] (approximate).
 - Motor air quality: 90PSI [6.2 BAR], dry, filtered 5 micron or better, lubricated at 3-4 drops/min.
 - Motor Exhaust. Optional Muffler Available. See sheet 3 for installation.
 - Refer to the PCFC Customer drawing for more information.
 - No rear mount options. Side mount options available.

NOTES: UNLESS OTHERWISE SPECIFIED.

DO NOT SCALE DRAWING. ALL DIMENSIONS ARE IN MILLIMETERS.

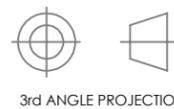


1031 Goodworth Drive, Apex, NC 27539, USA
Tel: +1.919.772.0115 www.ati-ia.com
Fax: +1.919.772.8259 ISO 9001 Registered Company


PROPERTY OF ATI INDUSTRIAL AUTOMATION, INC. NOT TO BE REPRODUCED IN ANY MANNER EXCEPT ON ORDER OR WITH PRIOR WRITTEN AUTHORIZATION OF ATI.

DRAWN BY: S. Yang 09/15/2021		TITLE	
CHECKED BY: G.Wu 04/11/2022		PCFC With ACV-750 Motor Kit Customer Drawing	
PROJECT # 190924-2	SHEET 1 OF 3	SCALE 1:5	SIZE B
DRAWING NUMBER 9630-50-PCFC-750-KIT		REVISION 01	

Removal of Standard Plates

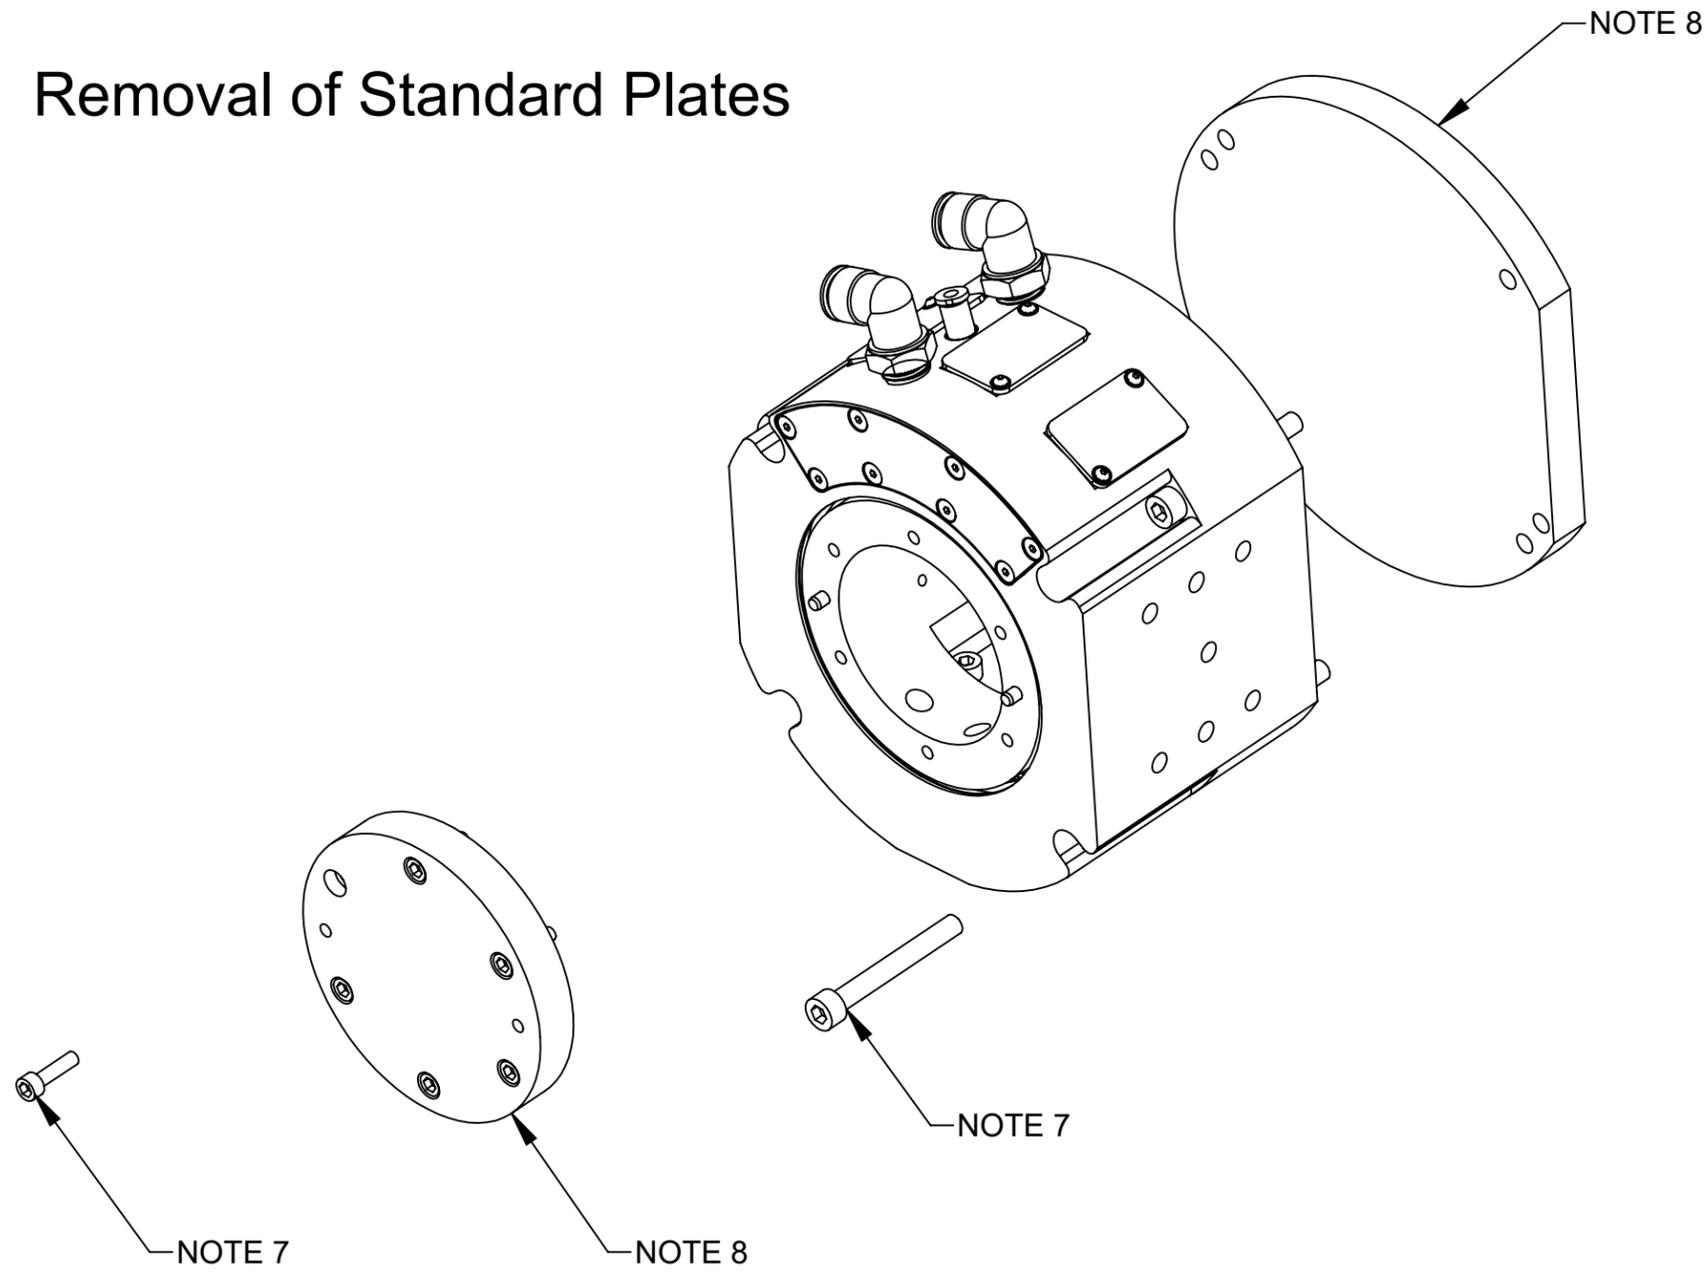

Before Disassembly

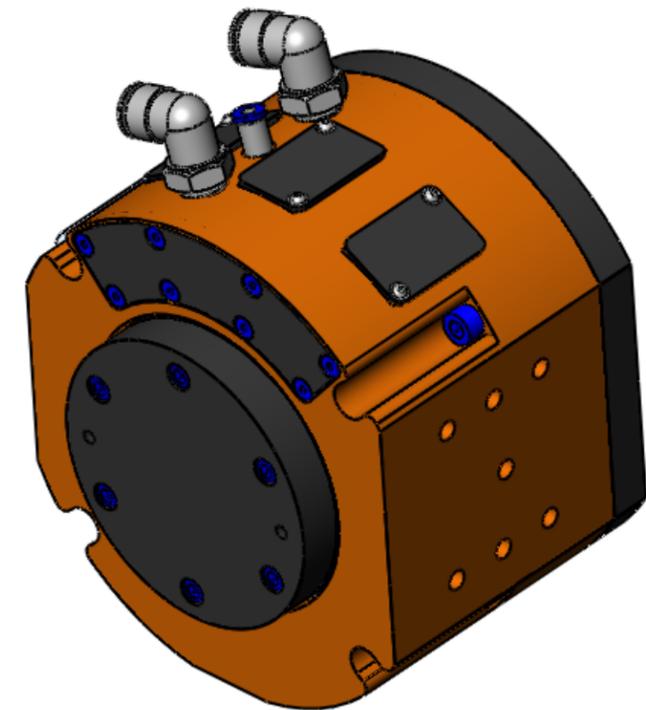

- Notes:
- 7. Keep all fasteners for ACV Kit assembly.
 - 8. Remove extra plates from base PCFC. Store plates for future use.

NOTES: UNLESS OTHERWISE SPECIFIED.

DO NOT SCALE DRAWING. ALL DIMENSIONS ARE IN MILLIMETERS.




1031 Goodworth Drive, Apex, NC 27539, USA
 Tel: +1.919.772.0115 www.ati-ia.com
 Fax: +1.919.772.8259 ISO 9001 Registered Company

PROPERTY OF ATI INDUSTRIAL AUTOMATION, INC. NOT TO BE REPRODUCED IN ANY MANNER EXCEPT ON ORDER OR WITH PRIOR WRITTEN AUTHORIZATION OF ATI.

DRAWN BY: S. Yang 09/15/2021		TITLE		
CHECKED BY: G.Wu 04/11/2022		PCFC With ACV-750 Motor Kit Customer Drawing		
PROJECT # 190924-2	SHEET 2 OF 3	SCALE 1:5	SIZE B	DRAWING NUMBER 9630-50-PCFC-750-KIT
				REVISION 01

Assembly of ACV-750 Kit

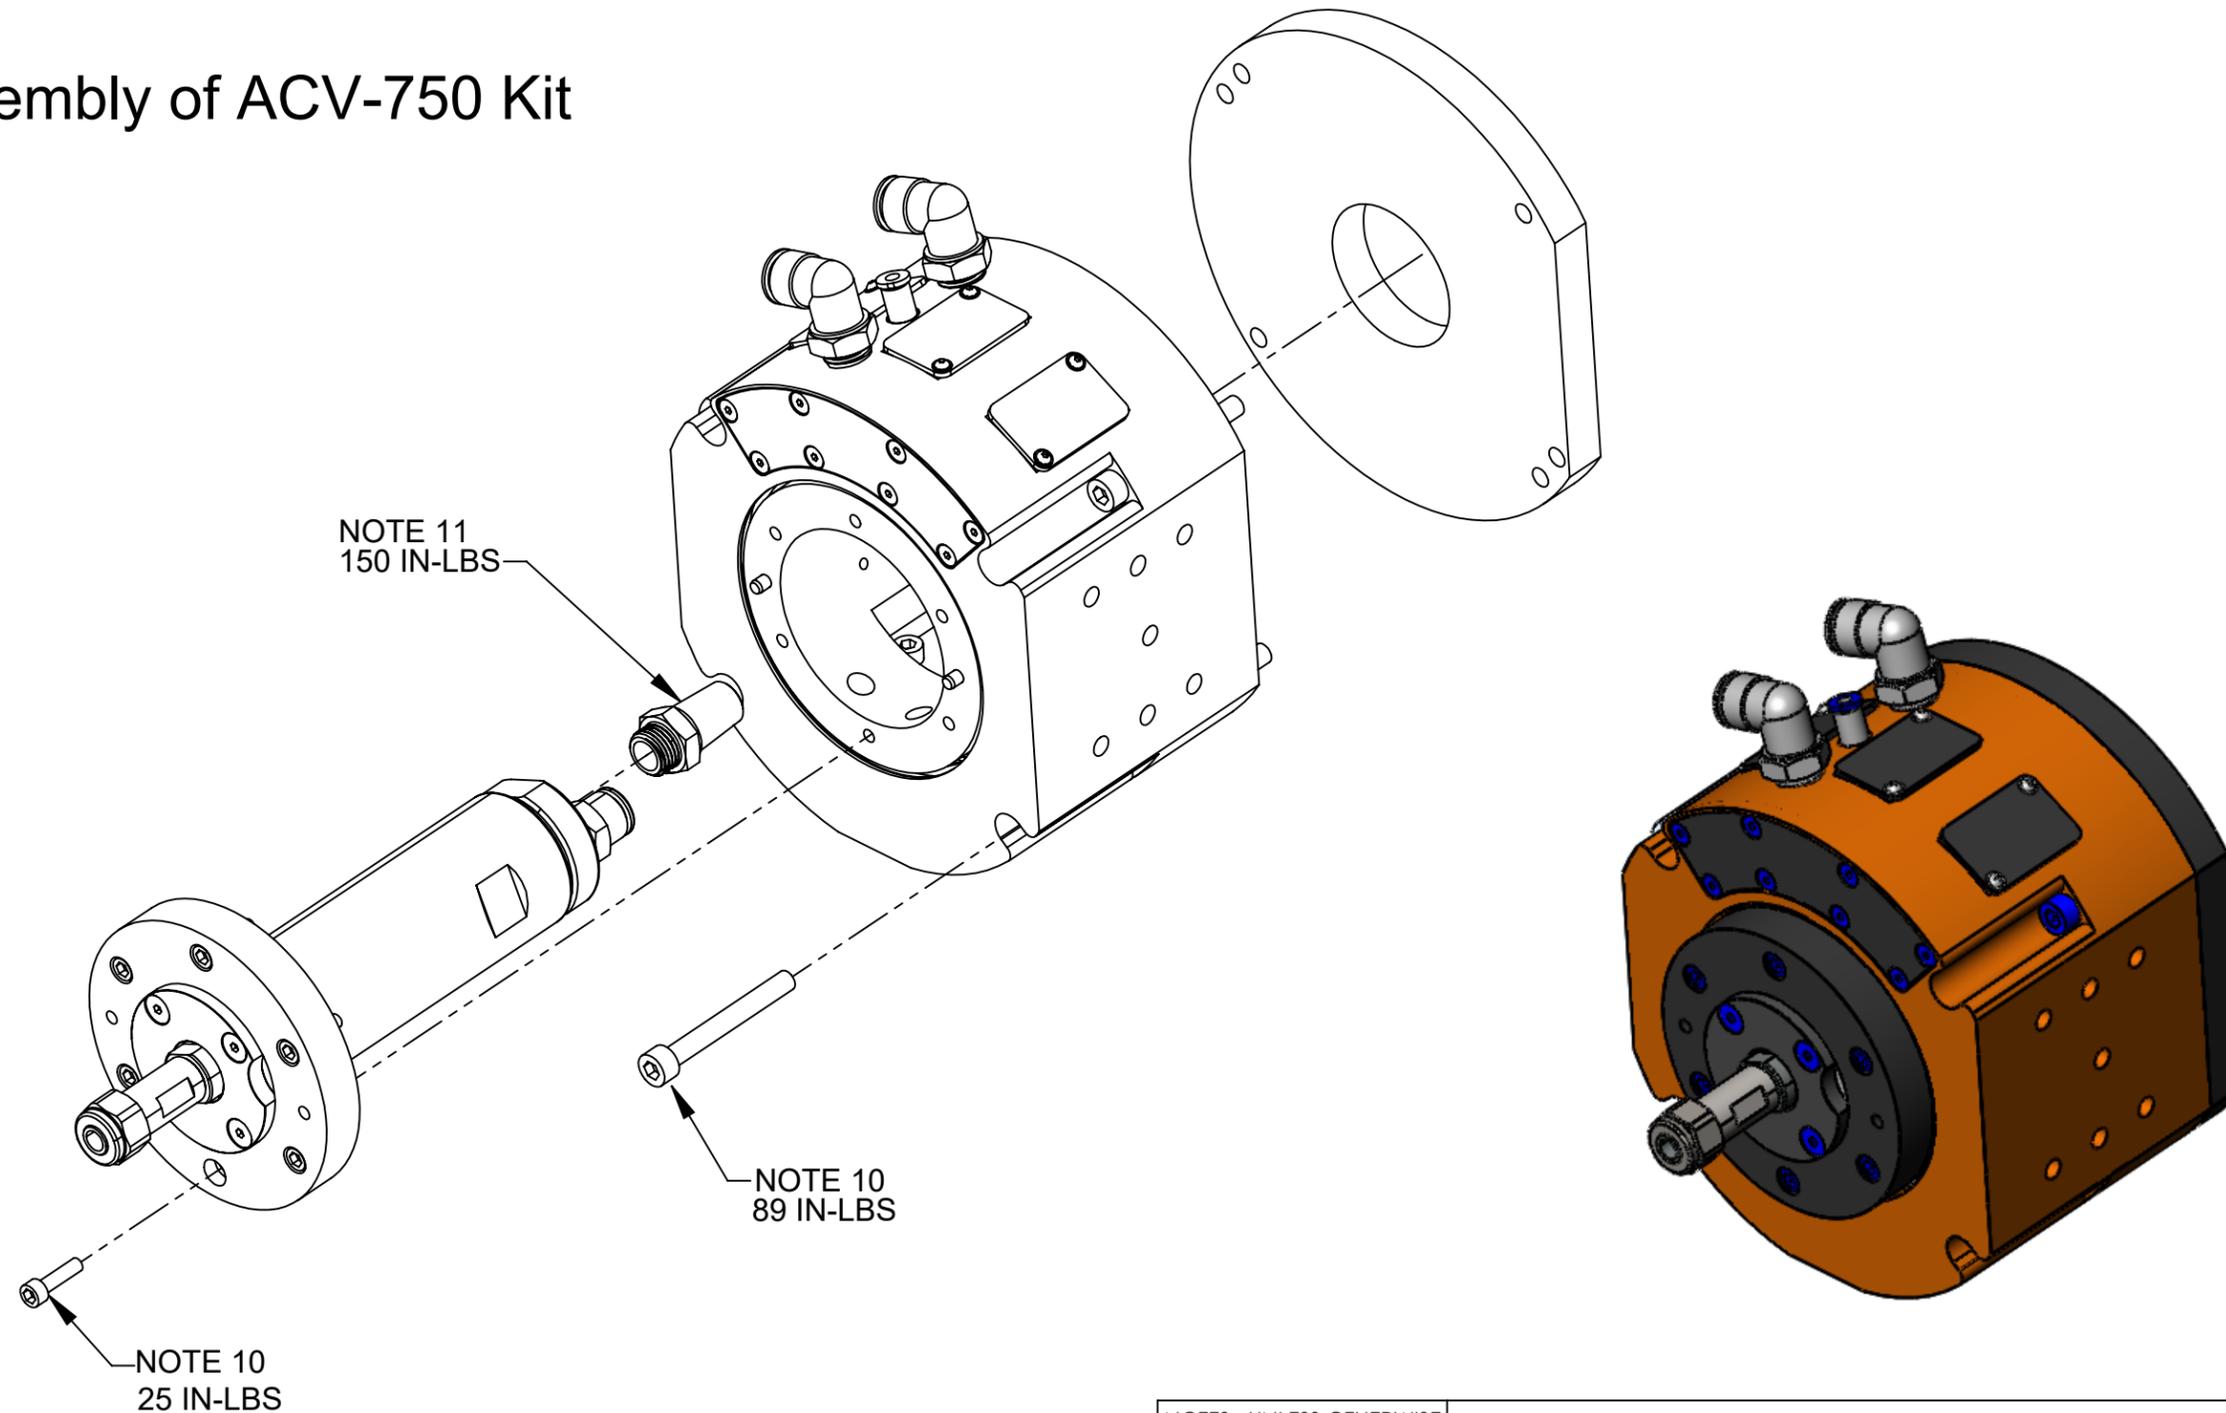

- Notes:
- 9. See sheet 2 for PCFC preparation.
 - 10. Customer to use Loctite 242 or similar thread locker and torque fasteners to listed torque value.
 - 11. Muffler supplied loose. Use Loctite 569 or similar thread locker and torque to listed torque value.

NOTES: UNLESS OTHERWISE SPECIFIED. DO NOT SCALE DRAWING. ALL DIMENSIONS ARE IN MILLIMETERS.		1031 Goodworth Drive, Apex, NC 27539, USA Tel: +1.919.772.0115 www.ati-ia.com Fax: +1.919.772.8259 ISO 9001 Registered Company PROPERTY OF ATI INDUSTRIAL AUTOMATION, INC. NOT TO BE REPRODUCED IN ANY MANNER EXCEPT ON ORDER OR WITH PRIOR WRITTEN AUTHORIZATION OF ATI.
 3rd ANGLE PROJECTION	DRAWN BY: S. Yang 09/15/2021 CHECKED BY: G.Wu 04/11/2022	TITLE PCFC With ACV-750 Motor Kit Customer Drawing
PROJECT # 190924-2 SHEET 3 OF 3	SCALE: 1:5 SIZE: B	DRAWING NUMBER: 9630-50-PCFC-750-KIT REVISION: 01