



PROPERTY OF ATI INDUSTRIAL AUTOMATION, INC.
NOT TO BE REPRODUCED IN ANY MANNER EXCEPT ON
ORDER OR WITH PRIOR WRITTEN AUTHORIZATION OF ATI.

Rev.	Description	Initiator	Date
01	Release	LJH	3/3/2008
02	Ball Plungers retained by Set Screws.	MJG	4/29/2008


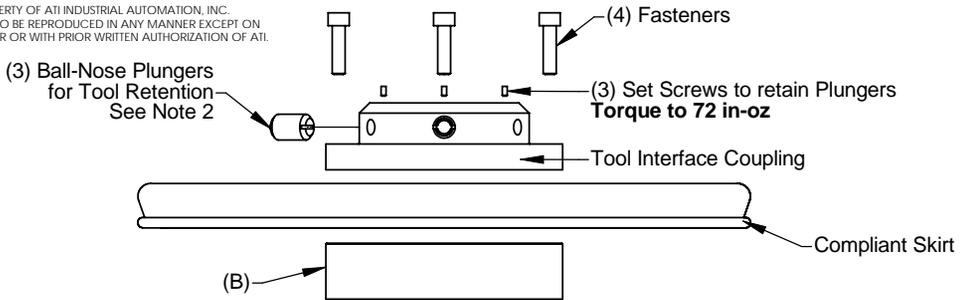


Dust Cover Assembly Exploded View


Dust Cover Assy. (A)
Isometric View
Scale 1:4

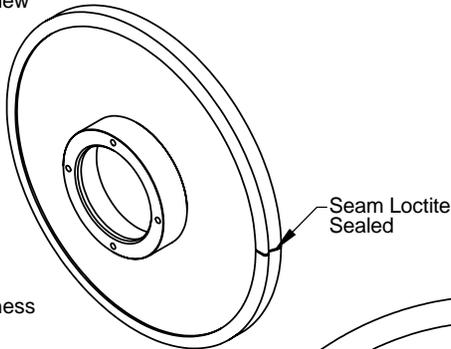


Al. Bearing Race (B)
Isometric View
Scale 1:4

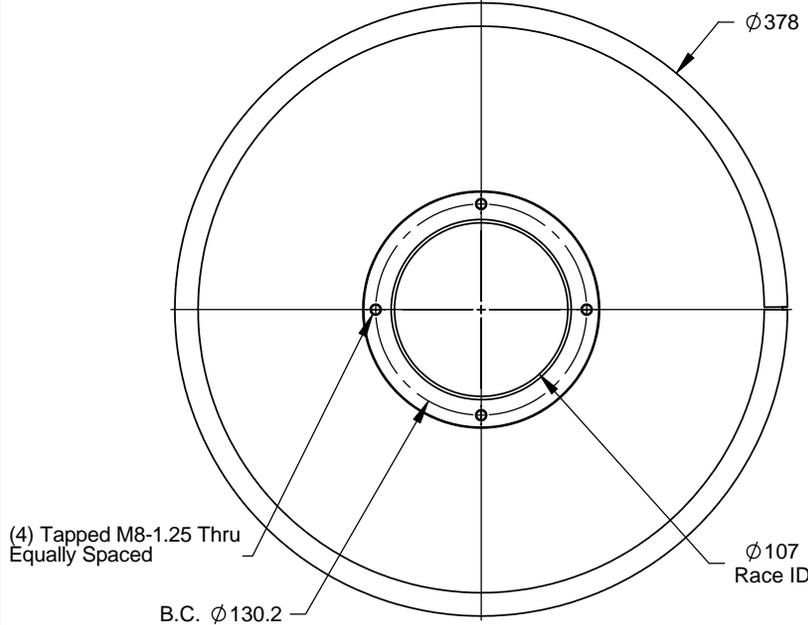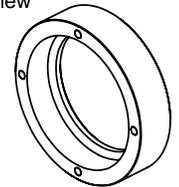

Tool Cover Tool Face

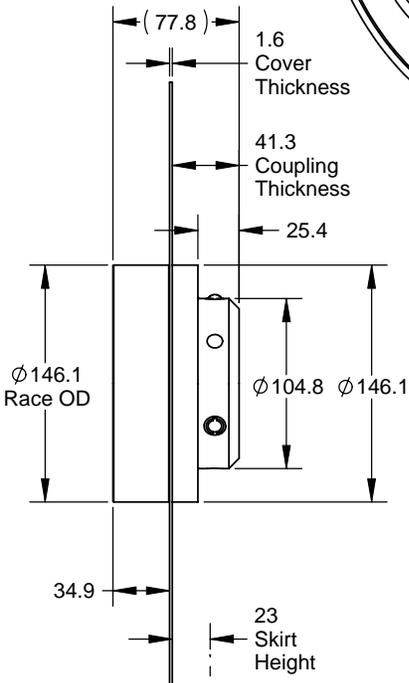

Side View
(Skirt not shown for Clarity)

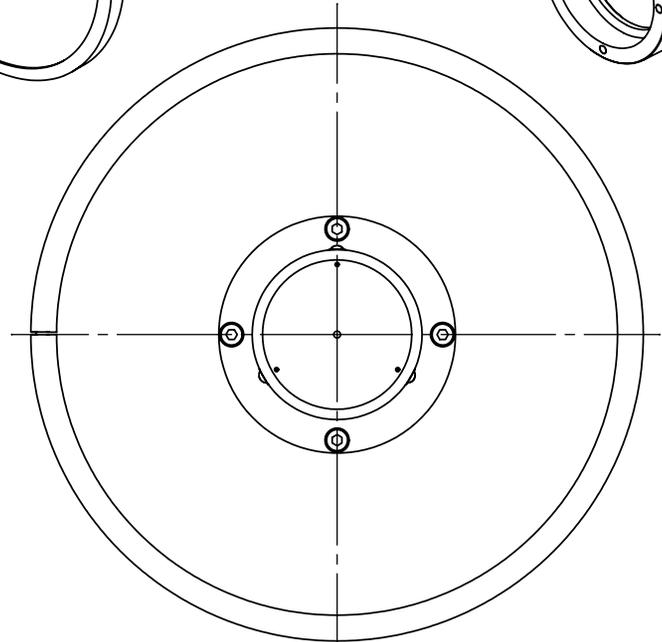

Tool Cover Master Face

Part Numbers:
(A) 200 Series Dust Cover Assy.: 9120-DC-201-9
(B) 200 Series Aluminum Bearing Race: 9120-DC-3266

- Notes:
- Materials of Construction:
 - A. Master Interface Race, Aluminum
 - B. Cover, Thin Gauge Stainless
 - C. Tool Interface Coupling, Delrin
 - D. Skirt, EPDM Rubber w/ Retention Clips
 - E. Ball-Nose Plungers, Stainless Steel Ball Tip and Case.
 - F. Set Screws, M3-0.5 x 6 mm, Flatpoint, Steel.
 - Ball Plungers require lubrication. Mobilgrease XHP-222 Special.
 - Flexibility to interchange cover sizes and replace worn parts.

NOTES: UNLESS OTHERWISE SPECIFIED
DO NOT SCALE DRAWING. DRAWN IN SOLIDWORKS.
ALL DIMENSIONS ARE IN MILLIMETERS.



1031 Goodworth Drive, Apex, NC 27502, USA
Tel: +1.919.772.0115 Email: info@ati-ia.com
Fax: +1.919.772.8259 www.ati-ia.com
ISO 9001 Registered Company

DRAWN BY: M.Gala, 3/3/08		TITLE: 200 Series Tool Cover w/ SST Ball Plungers		
CHECKED BY: L.Hines, 3/3/08		SCALE: 1:3	SIZE: B	DRAWING NUMBER: 9230-20-2735-02
WEIGHT LBS: 6.38		PRODUCT RELEASE #		
ASSEMBLY REF:		DATE: SHEET 1 OF 1		

