



Rev.	Description	Initiator	Date
03	ECO 19369; Fixed broken mates after updates to the 9120-P16M5-M and 9120-P16M5-T	DS	12/18/2020


### P16M5 Master Module (9120-P16M5-M)

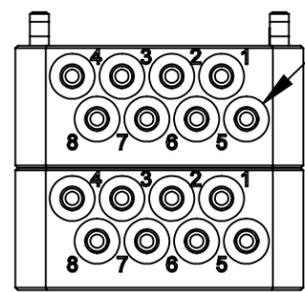

16X M5 Pass-Thru Ports - Axial  
(Air Service)

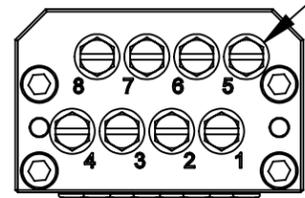

8X M5 Pass-Thru Ports - Radial  
(Air Service)

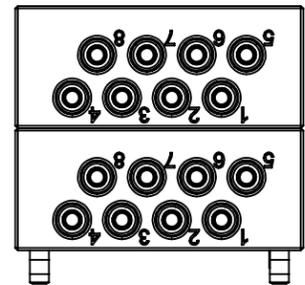


**Notes:**

**Material Of Construction**


1. Housing - Anodized Aluminum
2. Other - Nitrile, Nylon 66

**Operation**


1. Pneumatic Operation Only
2. For optimum performance inspect mating surfaces regularly to ensure they are free of debris.
3. M5 plugs installed in Radial ports as default. Customer to move to Axial ports if desired.
4. If required, customer to install M4 SHCS and torque pre-applied fasteners to listed torque value.

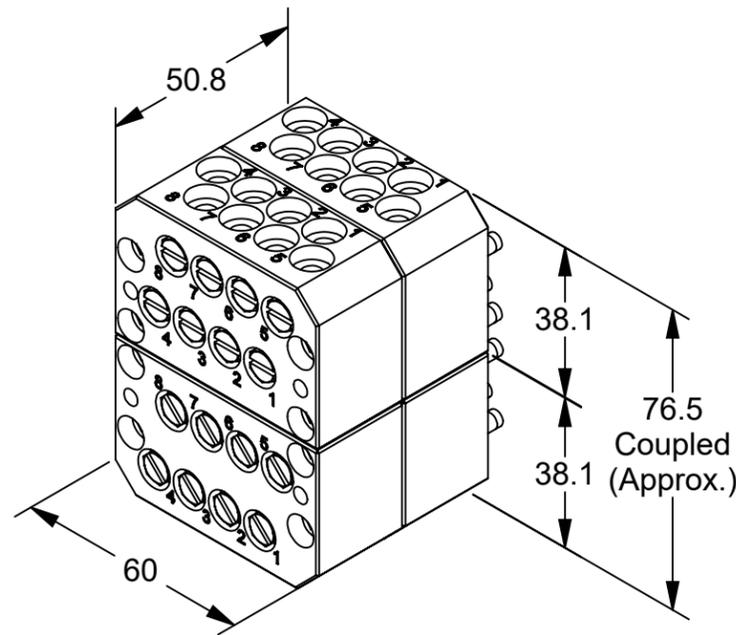



### P16M5 Tool Module (9120-P16M5-T)

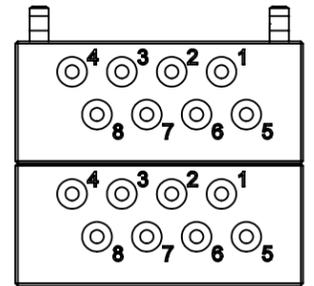


8X M5 Pass-Thru Ports - Radial  
(Air Service)

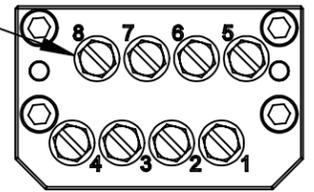

16X M5 Pass-Thru Ports - Axial  
(Air Service)

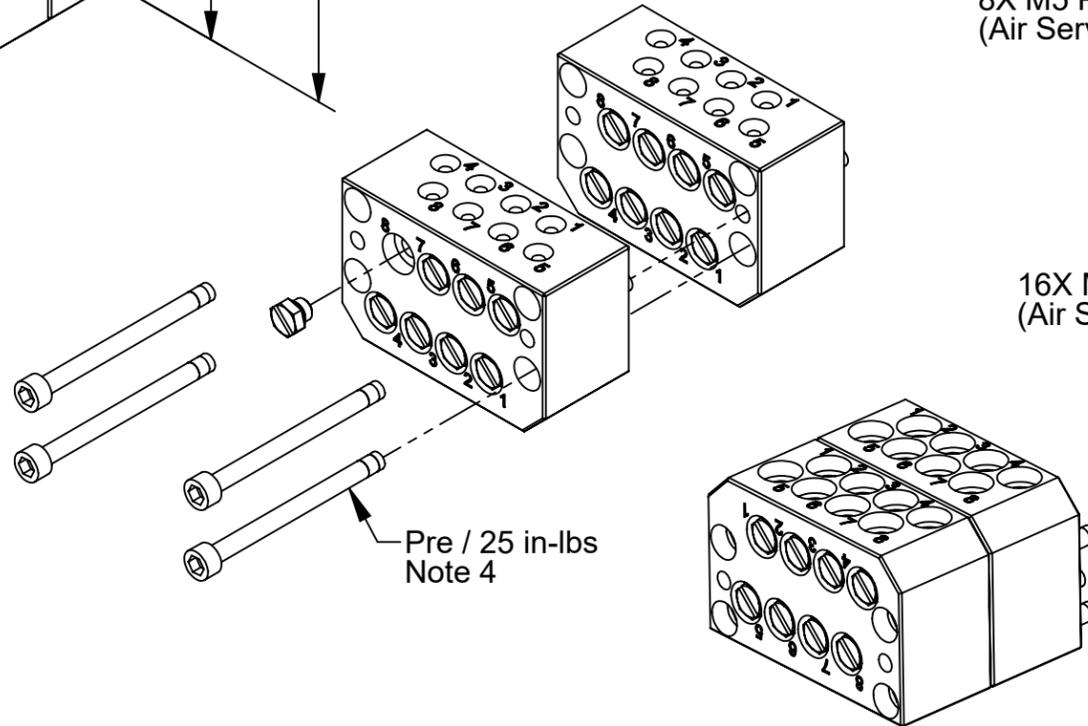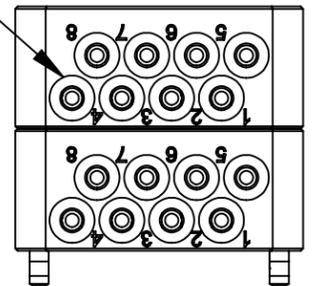

P16M5-M Servicable Parts			
ITEM NO.	QTY	PART NUMBER	DESCRIPTION
1	16	3405-1020001-01	M5 Blanking Plug w/ gasket, SS, Nylon 66
2	16	4010-0000014-02	M5 Rubber Bushing, Nitrile

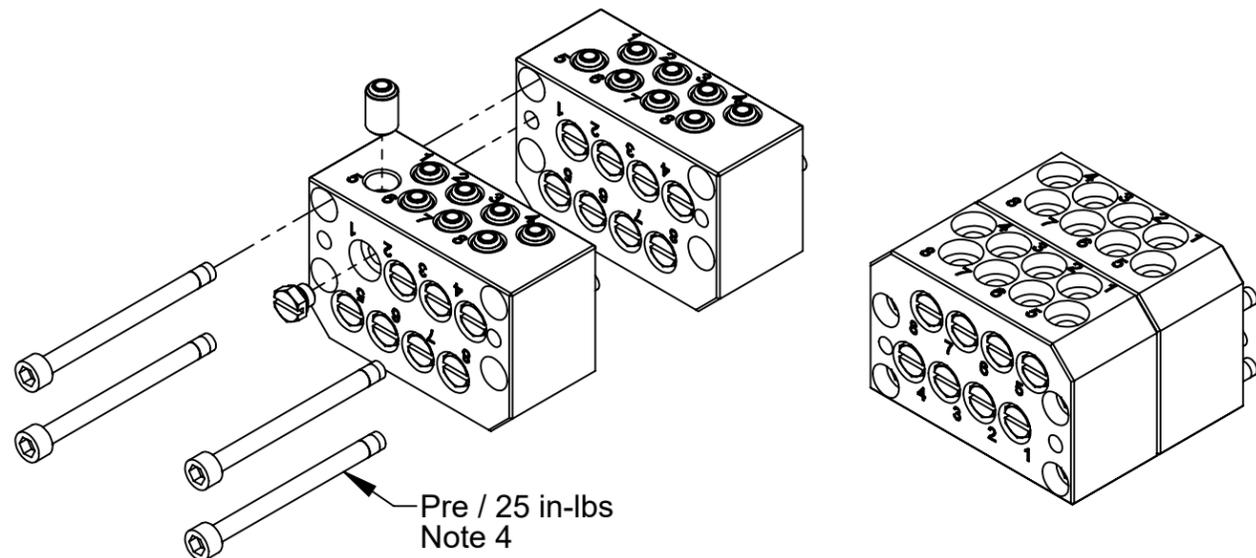

P16M5-T Servicable Parts			
ITEM NO.	QTY	PART NUMBER	DESCRIPTION
1	16	3405-1020001-01	M5 Blanking Plug w/ gasket, SS, Nylon 66

NOTES: UNLESS OTHERWISE SPECIFIED.

DO NOT SCALE DRAWING. ALL DIMENSIONS ARE IN MILLIMETERS.



3rd ANGLE PROJECTION



1031 Goodworth Drive, Apex, NC 27539, USA  
 Tel: +1.919.772.0115 Email: info@ati-ia.com  
 Fax: +1.919.772.8259 www.ati-ia.com  
 ISO 9001 Registered Company

PROPERTY OF ATI INDUSTRIAL AUTOMATION, INC. NOT TO BE REPRODUCED IN ANY MANNER EXCEPT ON ORDER OR WITH PRIOR WRITTEN AUTHORIZATION OF ATI.

DRAWN BY: J. Winterroth, 12/15/15		TITLE	
CHECKED BY: D. Norton, 1/19/16		P16M5 Module Drawing	
PROJECT # 150309-1	SHEET 1 OF 1	SCALE 2:3	SIZE B
		DRAWING NUMBER 9630-20-P16M5	REVISION 03