
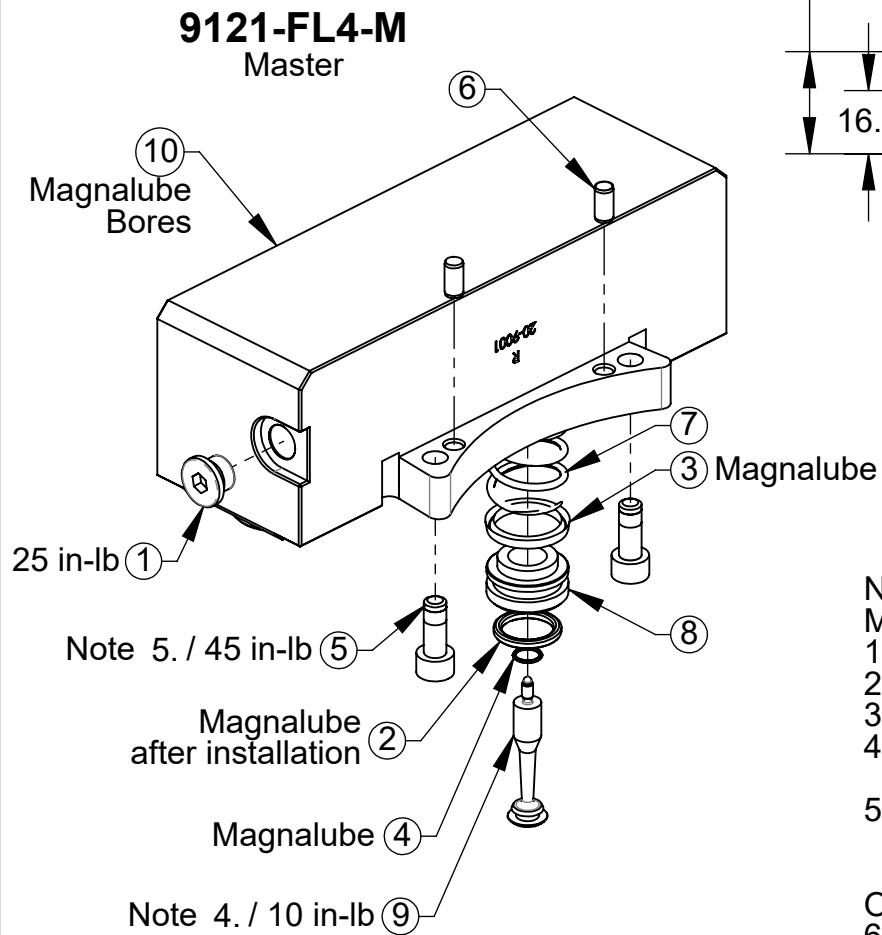


Rev.	Description	Initiator	Date
03	ECO 22132; 3700-20-8065 was 3700-20-2996	LJH	5/13/2025

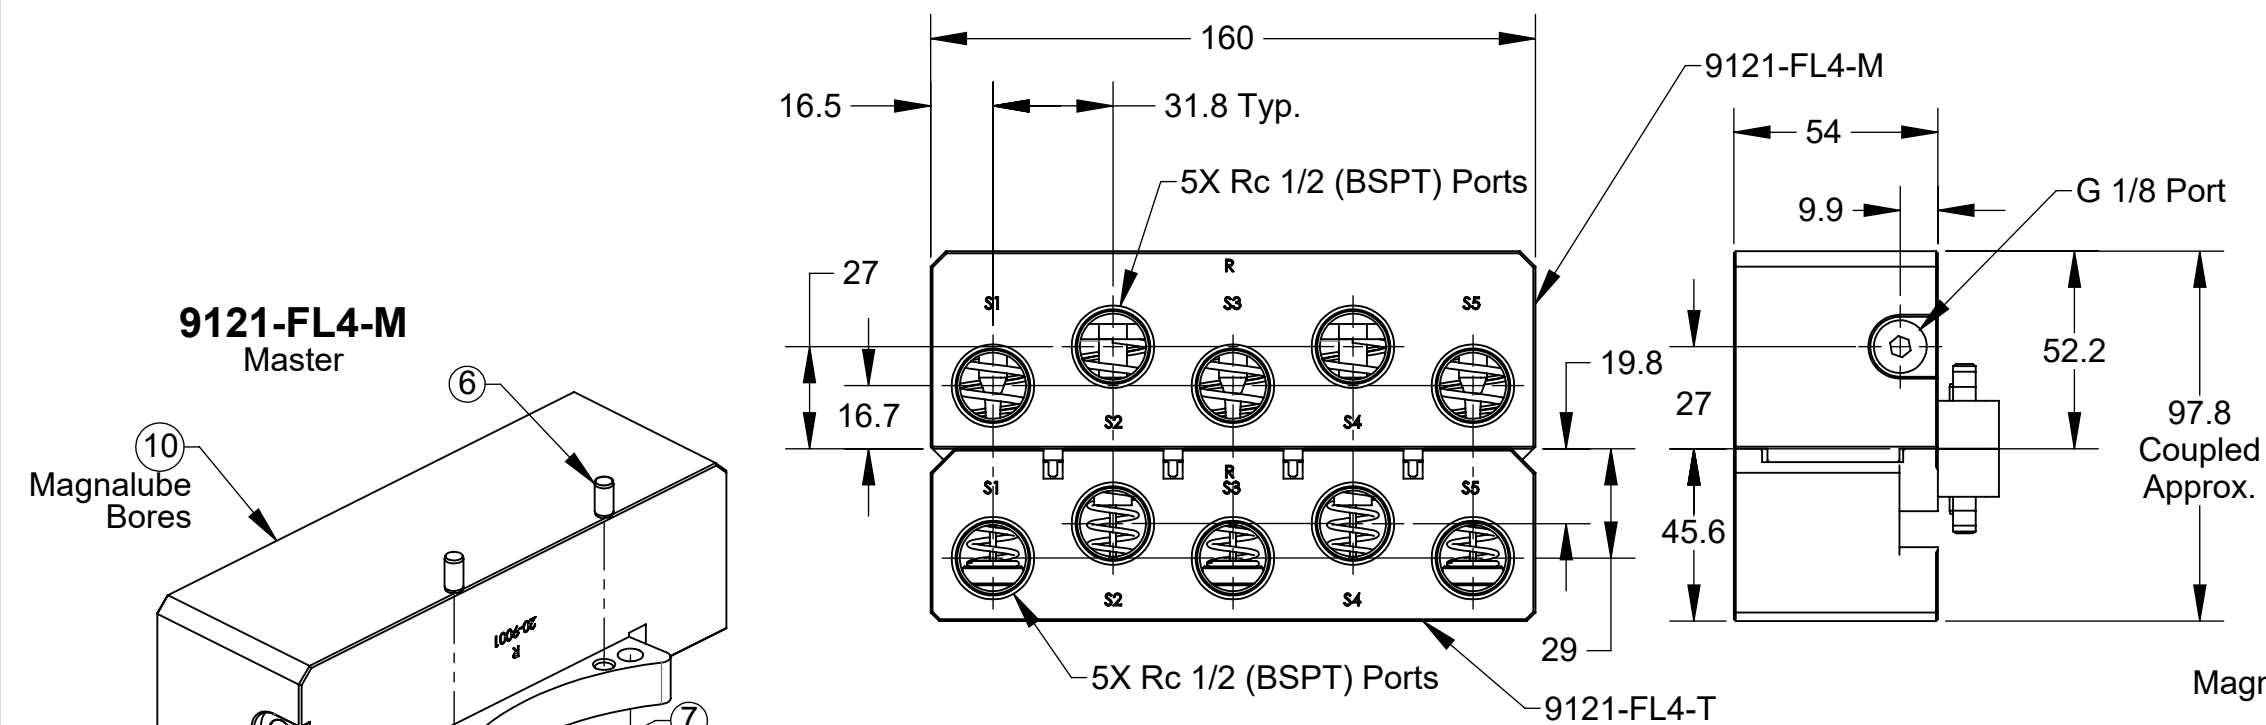


Notes:

Material of Construction:

1. Housings - Stainless Steel
2. Valve Components - Stainless Steel, PVC & Nitrile
3. G 1/8 Plug - Nickel Plated Brass
4. Replacement stem contains pre-applied thread locker. Use Loctite 7649 primer and Loctite 222 if reassembling with original stem.
5. Replacement screw contains pre-applied thread locker. Use Loctite 7649 primer and Loctite 242 if reassembling with original screw.

Operations:

6. For best results ensure fluids are near neutral pH, minimize fluid particulate size and keep fluid module mating surfaces free and clear of any debris.
7. Checked ports can produce significant forces when under high supply pressures. See product manual regarding proper operating procedure.

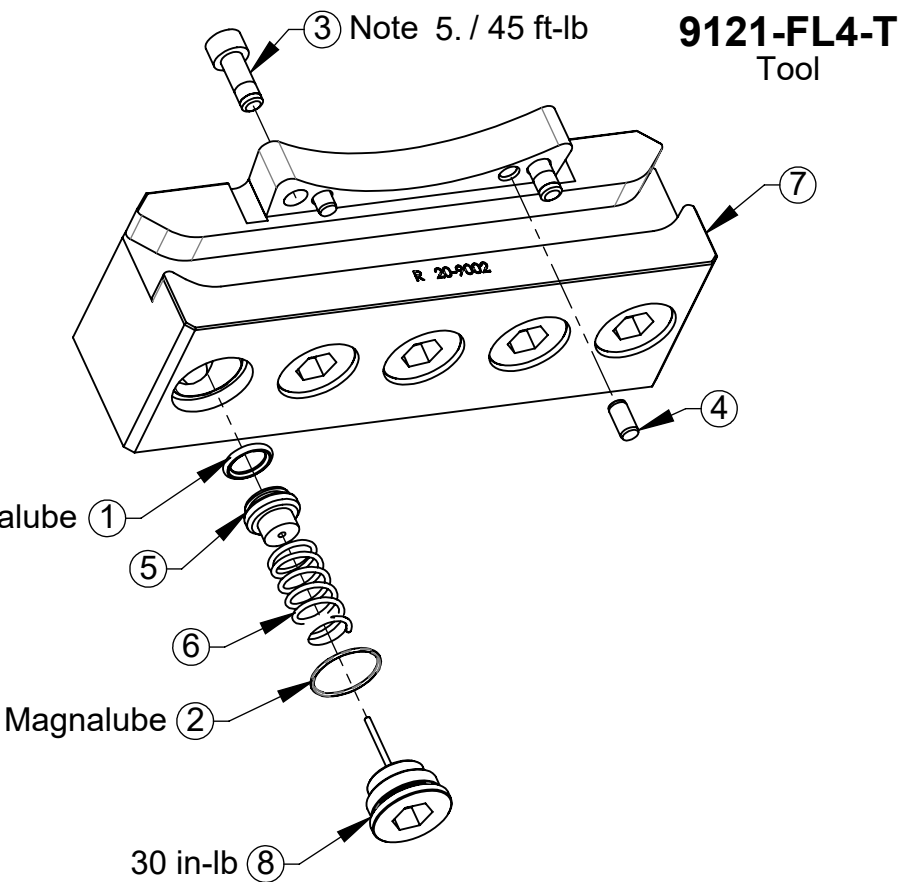

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	3405-1000002-00	G1/8 Plug, Hex Socket, O-Ring Seal
2	5	3410-0001065-01	O-Ring 14MM X 2MM Buna
3	5	3410-0001068-01	Mini U-Cup Seal 18mm ID x 22mm Buna
4	5	3410-0001183-01	O-Ring 6MM X 2MM Buna D90
5	2	3500-1066016-21A	M6-1 x 16mm SHCS, SS, Pre-Applied
6	2	3540-0105010-21	5mm x 10mm Dowel Pin SST
7	5	3700-20-1459	SPRING, FLUID/AIR MODULE, MASTER
8	5	3700-20-2994	Master Check Valve Piston
9	5	3700-20-8065	VALVE STEM, HIGH STRENGTH
10	1	3700-20-9001	FL4 Housing, Master


Note: Service Kit 9120-F2-M-Kit consists of (1) each of items 2, 3, 4, & 7.

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	5	3410-0001067-01	O-ring, 10mm x 2mm, Buna N, Dur. 90
2	5	3410-0001284-01	O-ring, .669OD x .047 wall, 70D, Buna-N
3	2	3500-1066016-21A	M6-1 x 16mm SHCS, SS, Pre-Applied
4	2	3540-0105010-21	5mm x 10mm Dowel Pin SST
5	5	3700-20-1457	Tool Fluid/Air Check Valve Piston
6	5	3700-20-1460	SPRING, FLUID/AIR MODULE, TOOL
7	1	3700-20-9002	FL4 Housing, Tool
8	5	9005-20-1515	3/8" Check Port Long Plug with Dowel

Note: Service Kit 9120-F1-T-Kit consists of (1) each of items 1, 2, & 6.

NOTES: UNLESS OTHERWISE SPECIFIED.

DO NOT SCALE DRAWING. ALL DIMENSIONS ARE IN MILLIMETERS.



1031 Goodworth Drive, Apex, NC 27539, USA
Tel: +1.919.772.0115 www.ati-ia.com
Fax: +1.919.772.8259 ISO 9001 Registered Company

PROPERTY OF ATI INDUSTRIAL AUTOMATION, INC. NOT TO BE REPRODUCED IN ANY MANNER EXCEPT ON ORDER OR WITH PRIOR WRITTEN AUTHORIZATION OF ATI.

DRAWN BY: D. Wagner 9/25/14		TITLE	
CHECKED BY: DKL 10/8/14		FL4 Module Drawing	
PROJECT # 140925-3	SHEET 1 OF 1	SCALE 1:2	SIZE B
DRAWING NUMBER 9630-20-FL4		REVISION 03	